

ArmaKleen Technical Service Report Summary

Cleaning Trial Type: Aqueous

Industry: Welding Products

Segment: Recreational & Machinery Dealerships

Soil: Shop dirt, oil, grime, drawing fluids, grease

Substrate: Steel

Description of Part(s): Machine/auto body parts and bracket

Customer objective: Improve cleaning performance, automate cleaning process, reduce rework and reject rate

Cleaner used: 5% by volume solution of ArmaKleen™BIO-24

Machine used: Ultrasonic Washer (SK Blackstone 6315)

Temperature used: 160°F

Time required: 1 hour


Post Cleaning: Fresh water rinse and air pressure dried

Recommendation to Customer: The ArmaKleen Technical Center recommends using a 5% by volume solution of ArmaKleen™ Bio 24 at 160°F in an Ultrasonic Washer for a minimum of 1 hour

Before Picture



After Picture

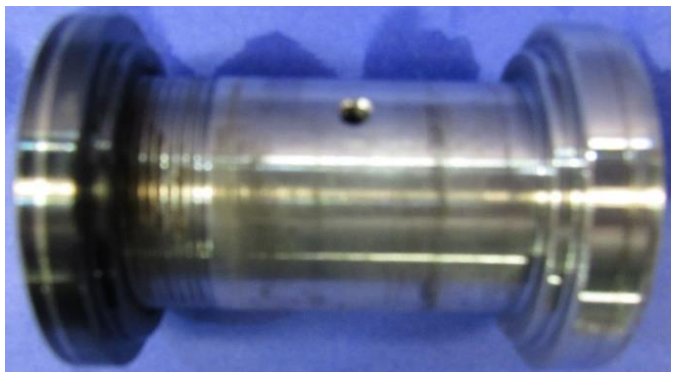

Source: TSR #18-A-107