

## ***ArmaKleen Technical Service Report Summary***

**Cleaning Trial Type:** Aqueous

**Industry:** Steel and Mining

**Segment:** Construction, General Contractors, & Building

**Soil:** Shop dirt, grime

**Substrate:** Glass, plastic, steel

**Description of Part(s):** Lens cover, plastic cover, clip

**Customer objective:** Improve cleaning performance, clean mixed metals together

**Cleaner used:** 5% by volume solution of ArmaKleen™ BIO-24

**Machine used:** Spray Washer (JRI FL 250, JRI FL 500, JRI TL 3)

**Temperature used:** 160°F

**Time required:** 30 minutes to 1 hour


**Post Cleaning:** Fresh water rinse and air pressure dried

**Recommendation to Customer:** The ArmaKleen Technical Center recommends using a 5% by volume solution of ArmaKleen™ Bio 24 at 160°F in a Spray-Under Immersion Washer for a minimum of 1 hour

**Before Picture**



**After Picture**

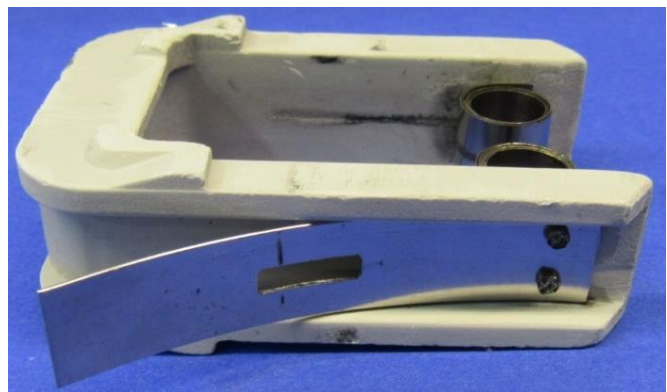

**Source:** TSR #18-A-065